



NR.	DESCRIPTION	ARTICLENR.
1	Clamping Block	XAM-791404
2	Bracket	XAM-792043
3	Slide Block	XAM-792301
4	Inside Tube 40	XAM-792806
5	Locking Clamp	XAM-7928073
6	Bushing	XAM-7928074
7	Shaft	XAM-7928075
8	Spring	XAM-7928076
9	Strut Spindle	XAM-7928077
10	Distance Plate	XAM-792808
11	Cranck	XAM-7928080
12	Column	XAM-792828
13	Adjusting Nut (Assembly)	XAM-7980009
14	Sliderblock Holder	XAM-7980023
15	Endplate Column (Stamp)	XAM-7980035S
16	Spindle	XAM-7980038
17	Clamping Bolt	XAM-7980054
18	Serial Plate	XAM-7980062
19	Sliding House	XAM-7980084ACA
20	Grip (Assembly)	XAM-7980201
21	Base B17-P	XAM-7B106XCA
22	Water Collection Device (assembly)	XAM-7B69C
23	Clamp	XAM-8S023
24	Spirit Level (Rectangle)	XAM-A5026
25	Bearing	XAM-ET019A
26	Wheel	XAM-F0001
27	Spirit Level (Round)	XAM-F1066
28	Covering Cap	XAM-F41140
29	Rubber	XAM-F46520
30	Hex-Head Bolt	XAM-FB1070
31	Hex-Head Bolt	XAM-FB2030
32	Cylinder Head Cap Screw	XAM-FBB850
33	Cylinder Head Cap Screw	XAM-FBC012
34	Cylinder Head Cap Screw	XAM-FBC825

NR.	DESCRIPTION	ARTICLENR.
35	Cylinder Head Cap Screw	XAM-FBC875
36	Countersunk Flat Head Self-tapping Screw	XAM-FF3630
37	Helicoil	XAM-FG1218
38	Hex Nut	XAM-FM06B
39	Prevailing Torque Type Hex Nut	XAM-FM08B
40	Locking Nut M12	XAM-FM12B
41	Spring Retaining Ring	XAM-FR014
42	Spring Retaining Ring	XAM-FR020
43	Washer	XAM-FS06
44	Washer	XAM-FS10
45	Washer	XAM-FS12
46	Washer (Brass)	XAM-FS14M
47	Washer	XAM-FS20
48	Shimring	XAM-FS20P3
49	Spring Washer	XAM-FV10
50	Spring Washer	XAM-FV12
51	Countersink Screw	XAM-FV2030